


matki

EAUZONE PLUS EPR - HINGED DOOR FROM WALL

BRITISH PATENT NO. 2470778

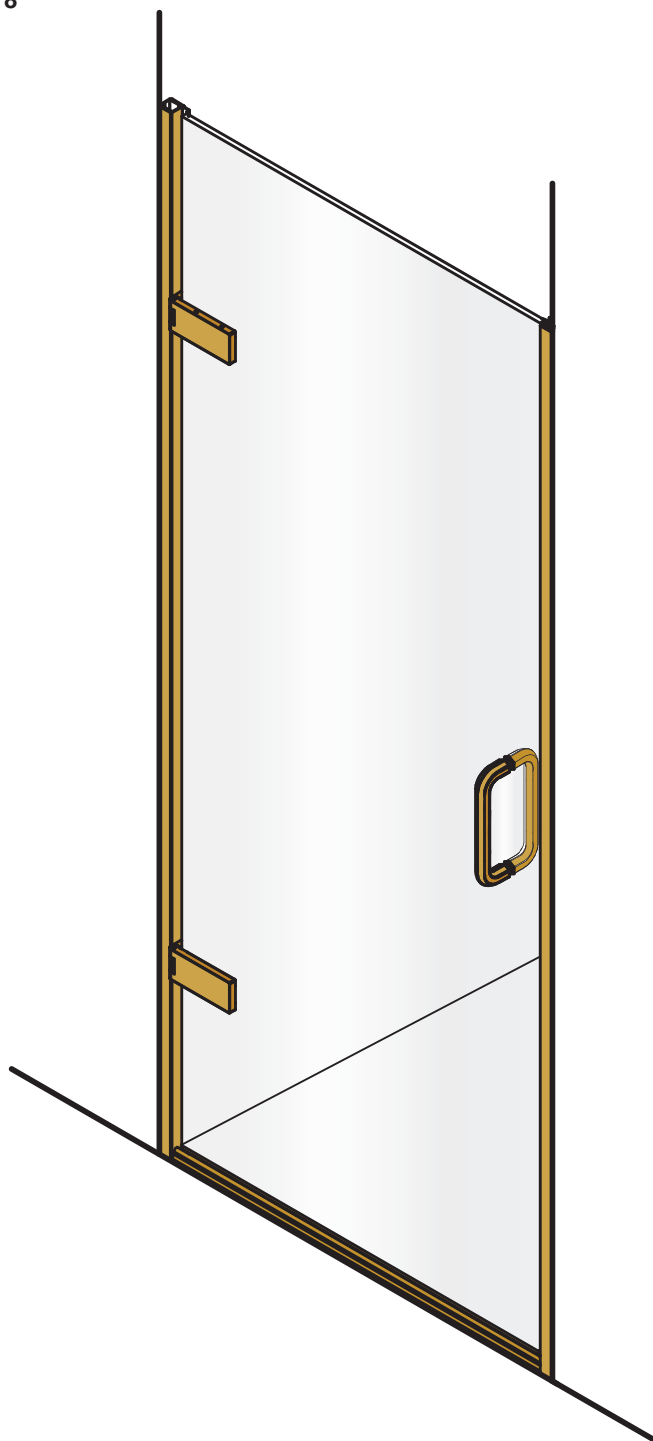

INSTALLATION

PARTS LIST

PLEASE PASS THE
GUARANTEE CARD ON
TO THE CUSTOMER

MATKI PLC, CHURCHWARD ROAD, YATE, BRISTOL, BS37 5PL
TELEPHONE: 01454 322888 (CUSTOMER SERVICES) EMAIL: techsupport@matki.co.uk

CE

UK
CA

matki

Matki PLC, Churchward Road, Yate,
Bristol BS37 5PL

BS EN 14428:2015+A1:2018

9913 AF 10/21

Matki recommend that this product is fitted by professional installers

IMPORTANT

TOOLS REQUIRED

Masonry Drill bit 6mm, Tape Measure, Screw Drivers, Safety Glasses, Allen Keys, Electric Drill, Level, Pencil, Adjustable Spanners, Non Slip Gloves

Before disposing of carton and/or commencing assembly, please check all the parts to ascertain that none are missing and they are all undamaged. No claim for missing/damaged parts will be accepted once the packing carton has been disposed of and/or assembly has commenced.

In case of query contact your Stockist with details of model number and details of serial number.

PREPARATION IMPORTANT


1. Please read complete installation instructions before fitting for Enclosure and Tray (if fitting).
2. We recommend that two people are available for fitting of Door, stage 5. The **Eauzone Plus** range is **10mm Glass** construction. Large glass panels are very heavy. We recommend the use of Safety glasses and Non slip gloves when handling the glass panels.
3. Ensure that the product can be **fixed** to a **solid masonry wall** or suitable **timber stud work grade C16/C24** in the area behind the Wall frames and Panel fixing brackets.
4. Shower trays or tiled floors **must be absolutely level** where enclosures are fitted
5. If fitting a tray we recommend a **drainage test** is carried out before the tray is tiled in position.
6. The assembly should be installed onto a waterproof wall covering and installed after the Tray and wall coverings are in place. Where Tiling lips are provided Trays should be let into the Wall with the Tiling lip flush with the wall to allow the Tiling to overlap the Tiling lip.
7. Seal between tray and tiles. Remove any excess sealant from the area/joint between the tray and the tiles where the Wall Mount is to be fitted. This will ensure the Wall mount fits correctly to the wall and tray/or tiled floor.

CAUTION: TEMPERED GLASS CANNOT BE CUT, POLISHED METAL AND CHROME CAN BE SCRATCHED. CAREFULLY REMOVE ASSEMBLY FROM CARTON, DO NOT PLACE GLASS ON HARD FLOOR OR EXPOSE EDGES TO IMPACT.

DIMENSIONS


Dimensions are approximate

MODEL RECESS	A
EPR 700	670 – 700
EPR 760	730 - 760
EPR 800	770 – 800
EPR 900	870 – 900

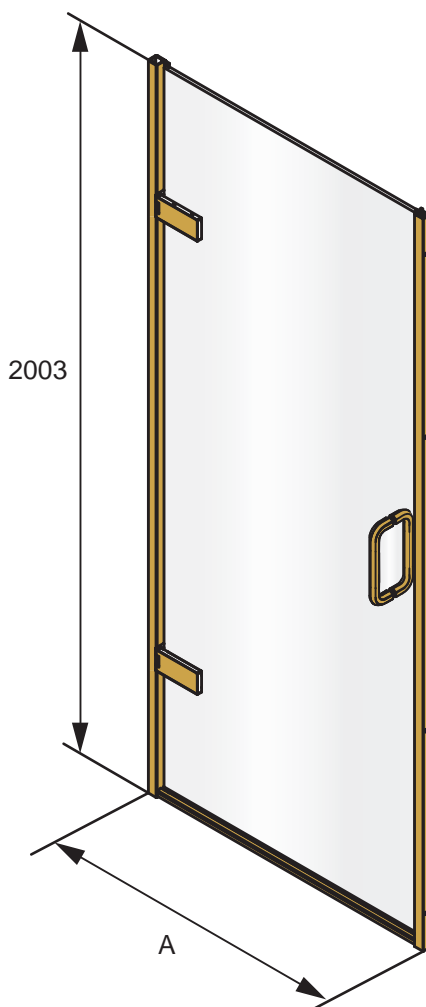


SETTING OUT


DIAGRAMS SHOW EPR LH HINGED DOOR, REVERSE FOR RH

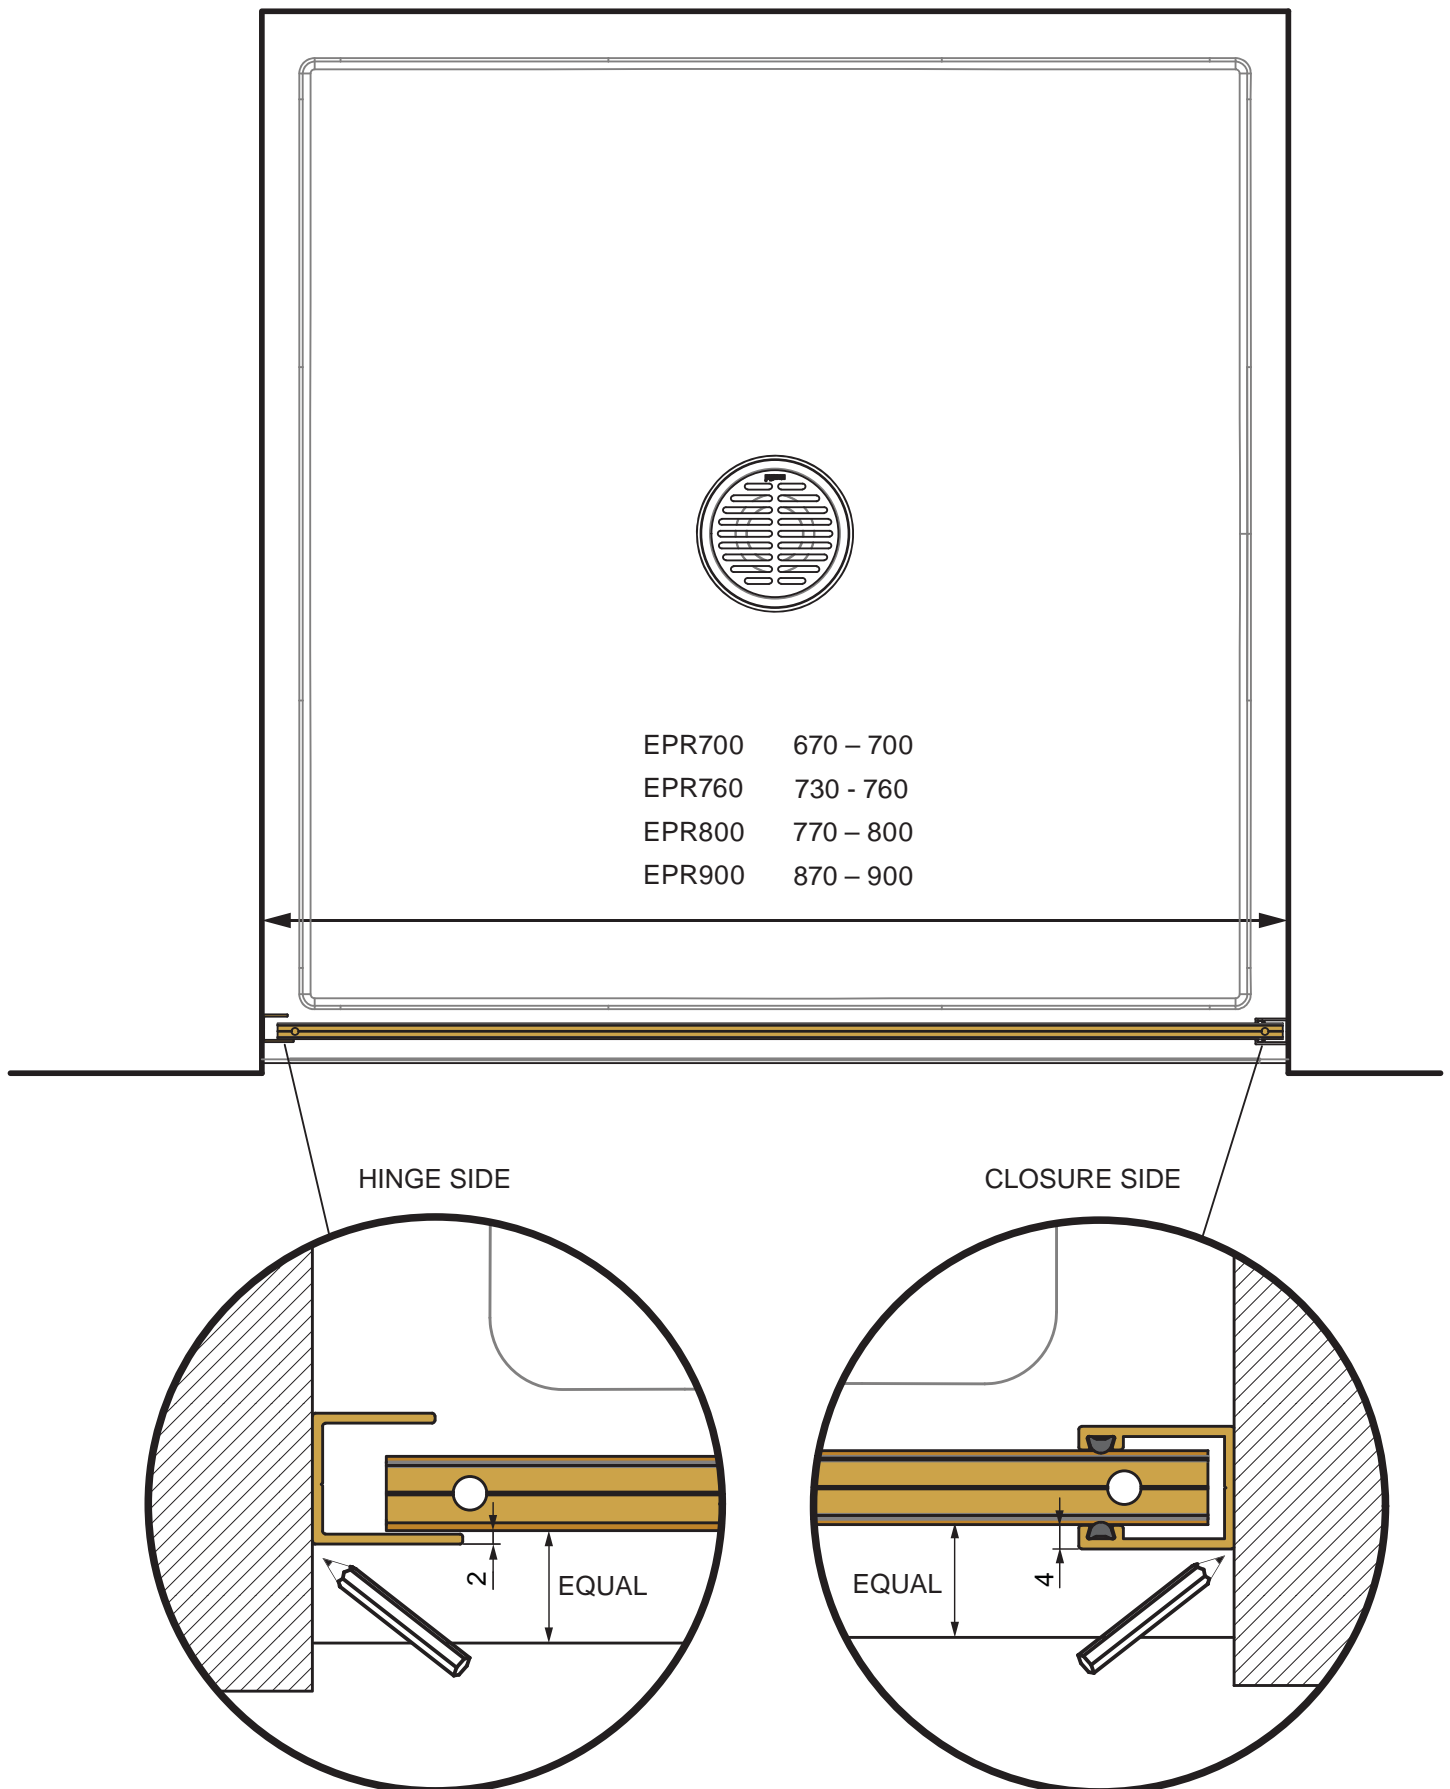



STAGE 1

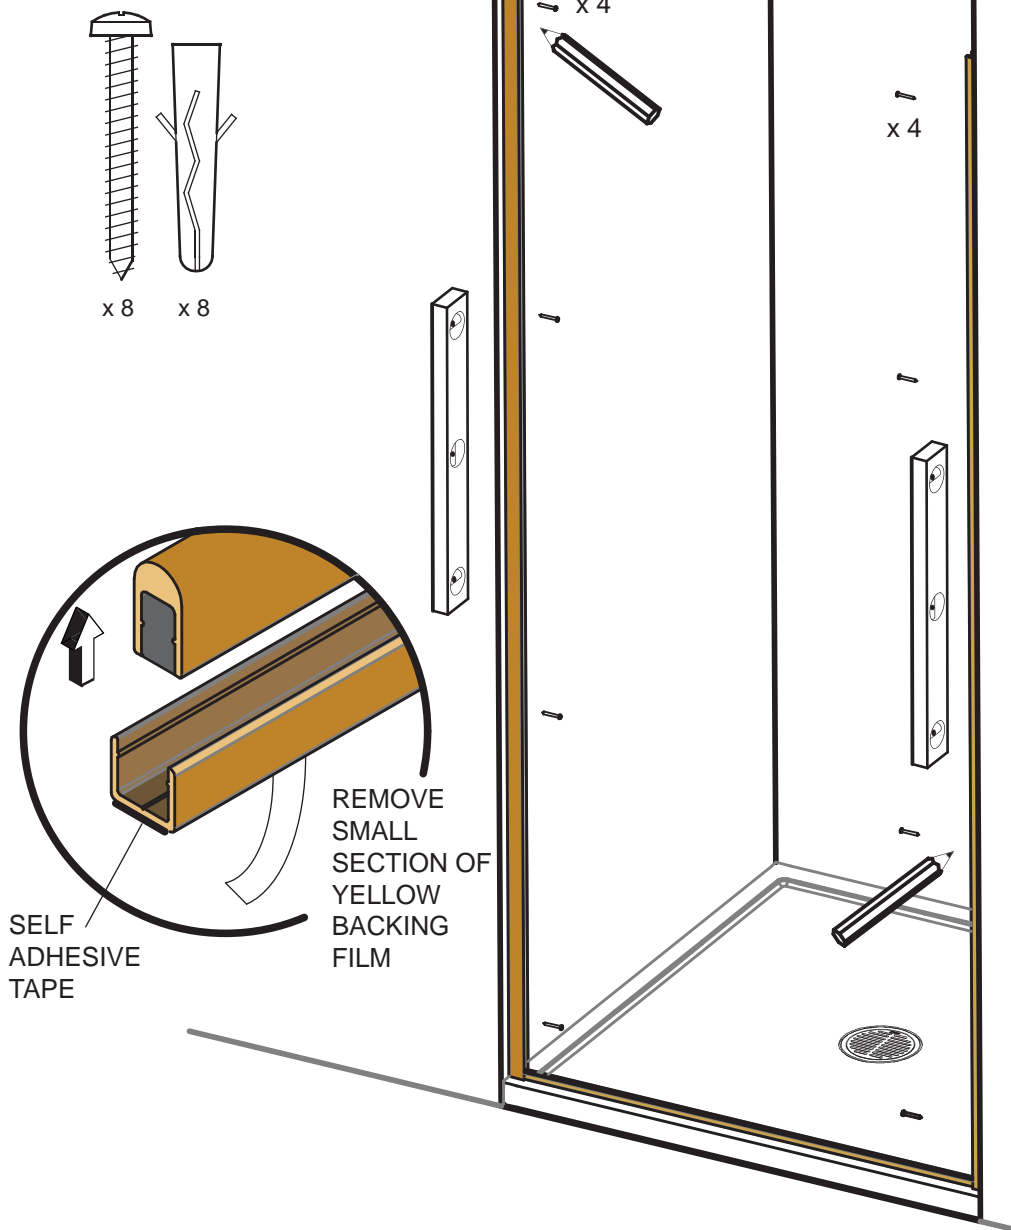






HINGE SIDE

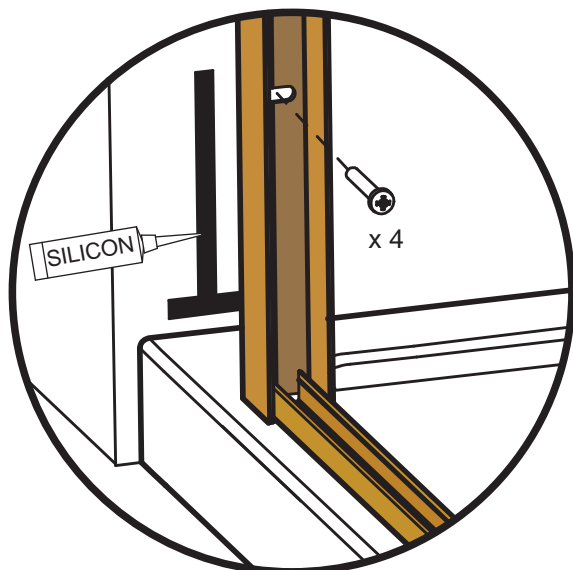









CLOSURE SIDE

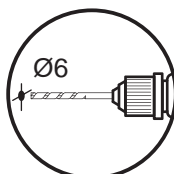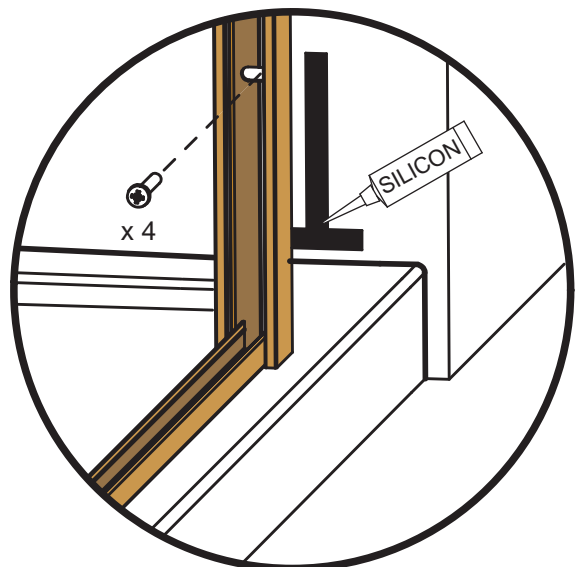

STAGE 2

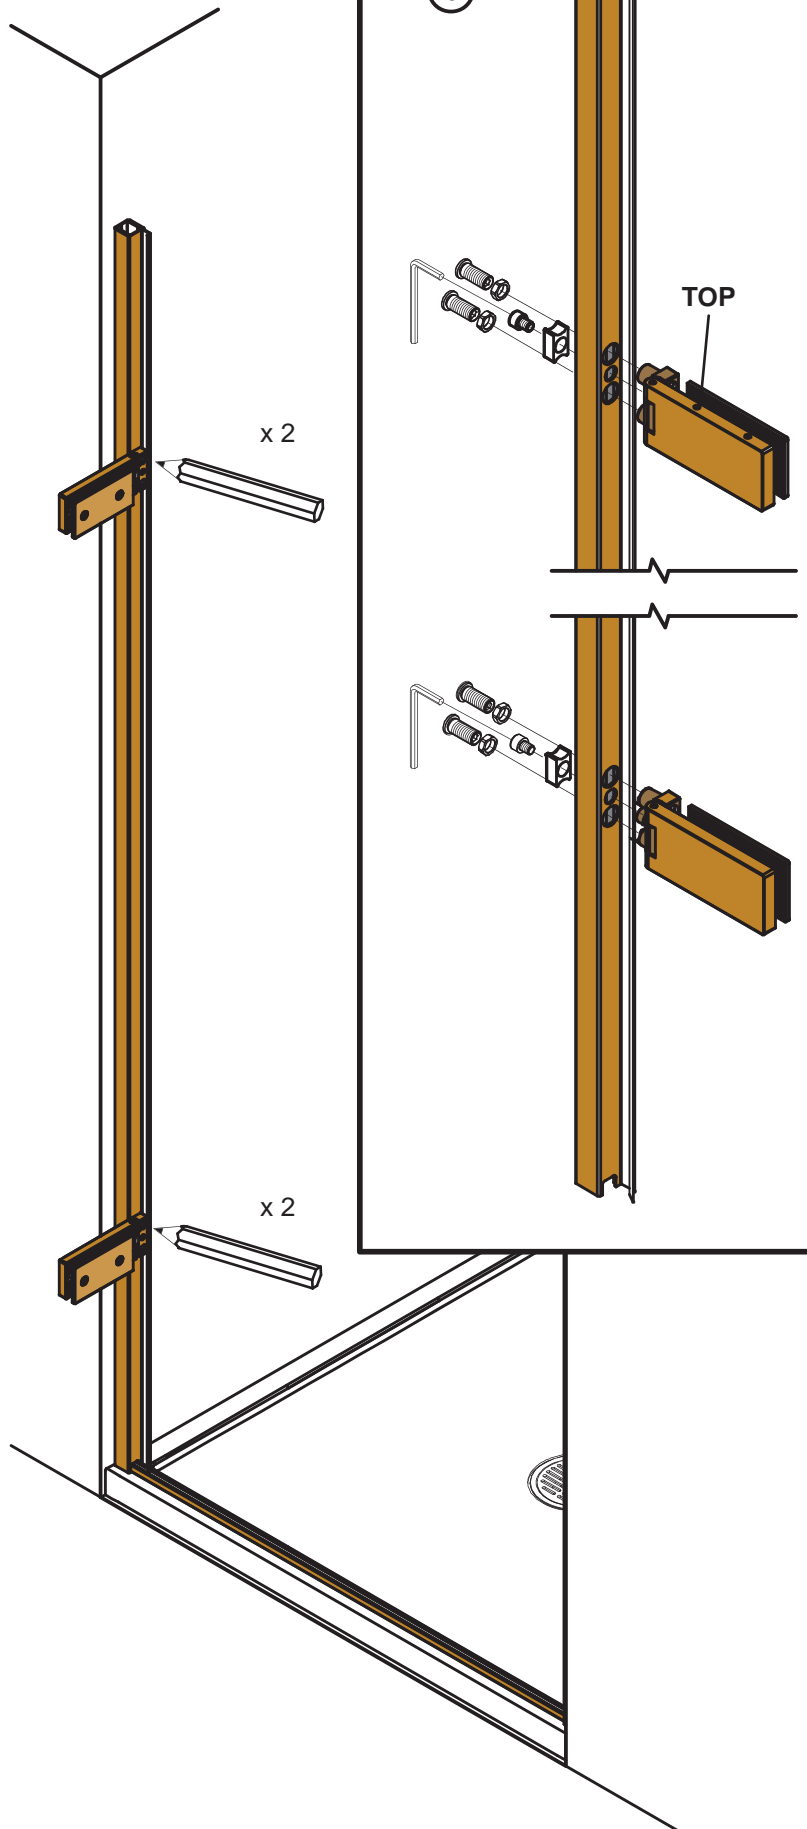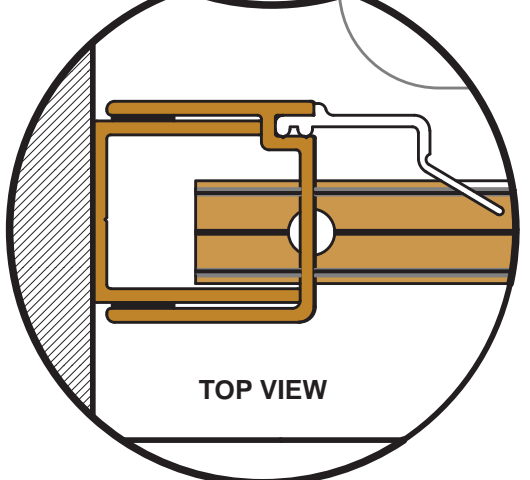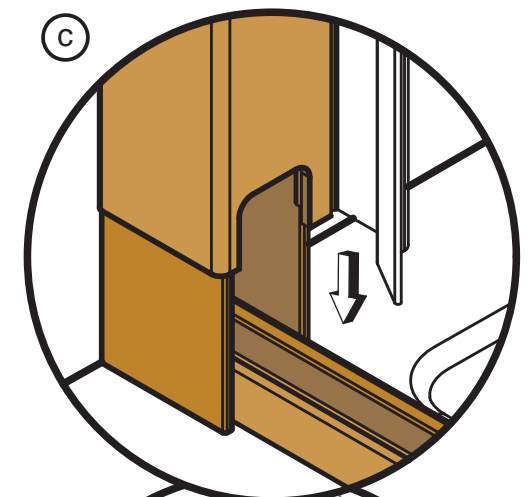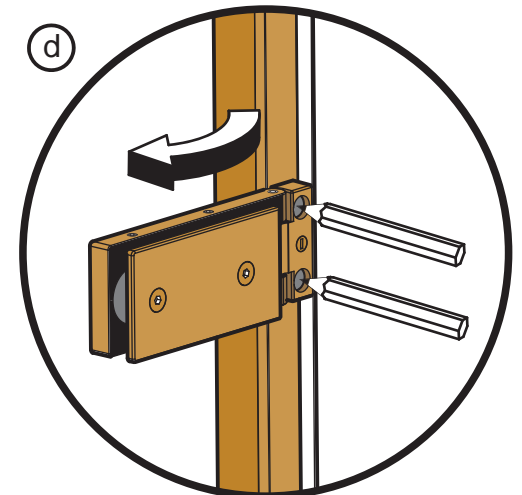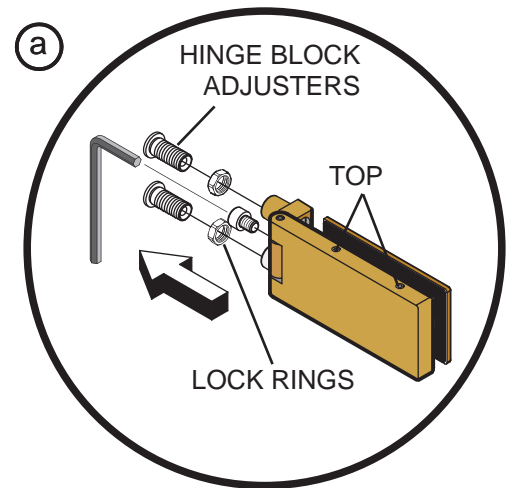

STAGE 3

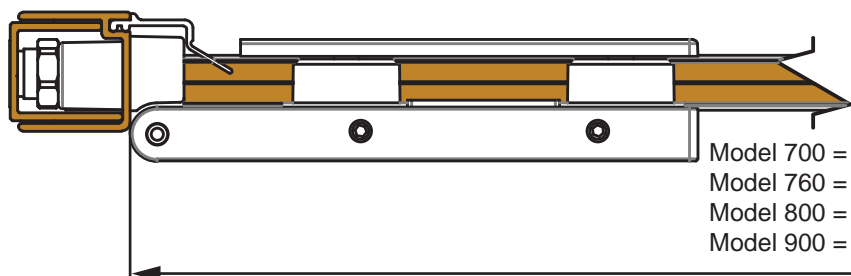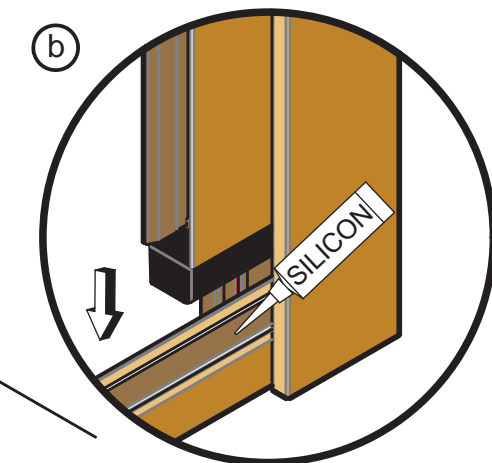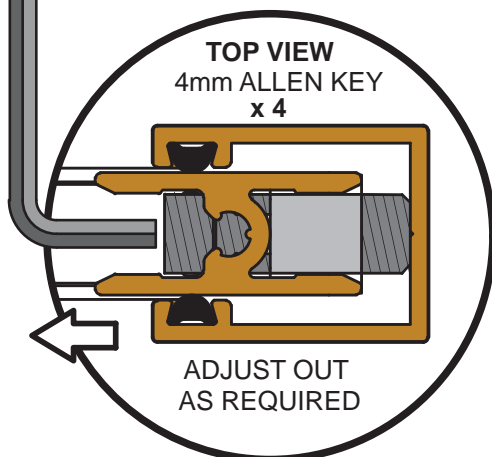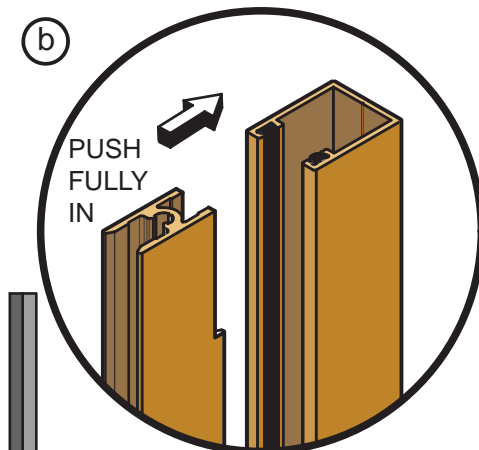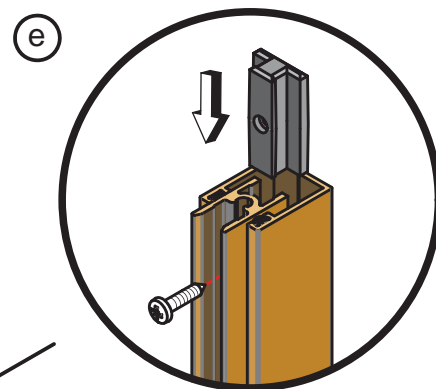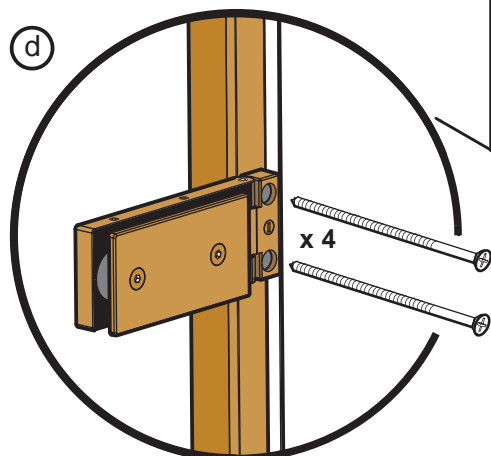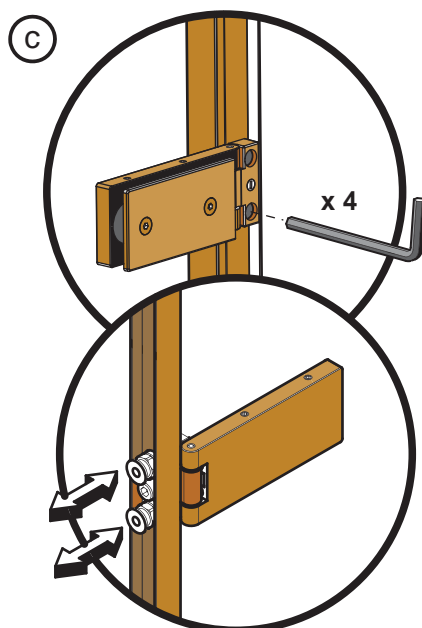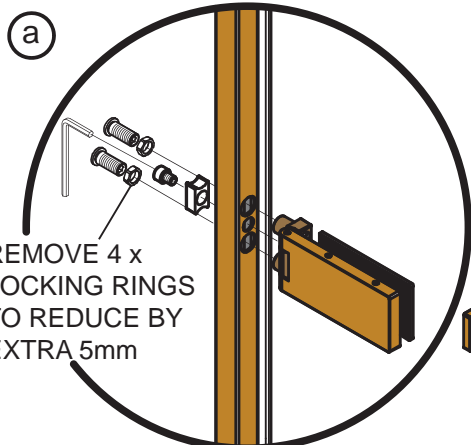

Model 700 = 613mm (614.5mm with Accent)
Model 760 = 673mm (674.5mm with Accent)
Model 800 = 713mm (714.5mm with Accent)
Model 900 = 813mm (814.5mm with Accent)

STAGE 4


IMPORTANT! TAKE NOTE OF
CORRECT SOCKET SET SCREW
POSITIONING FOR DOOR HAND

LH DOOR ADJUSTMENT BLOCK POSITION


RH DOOR ADJUSTMENT BLOCK POSITION

UPPER HINGE

REMOVE
BACKING
FILM

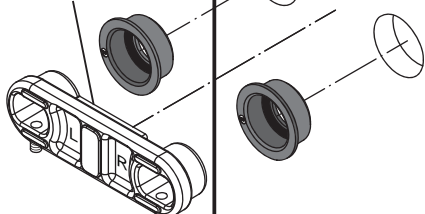


ROTATE
OUT BY
2mm




UPPER HINGE

REMOVE
BACKING
FILM

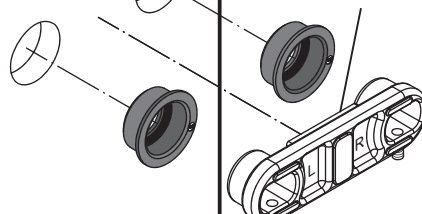

ROTATE
OUT BY
2mm




LH DOOR
(OUTER
SIDE)


RH DOOR
(OUTER
SIDE)

LOWER HINGE

REMOVE
BACKING
FILM

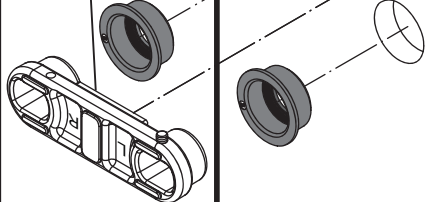


ROTATE
OUT BY
2mm




LOWER HINGE







REMOVE
BACKING
FILM

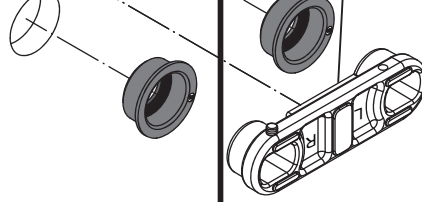

ROTATE
OUT BY
2mm




STAGE 5

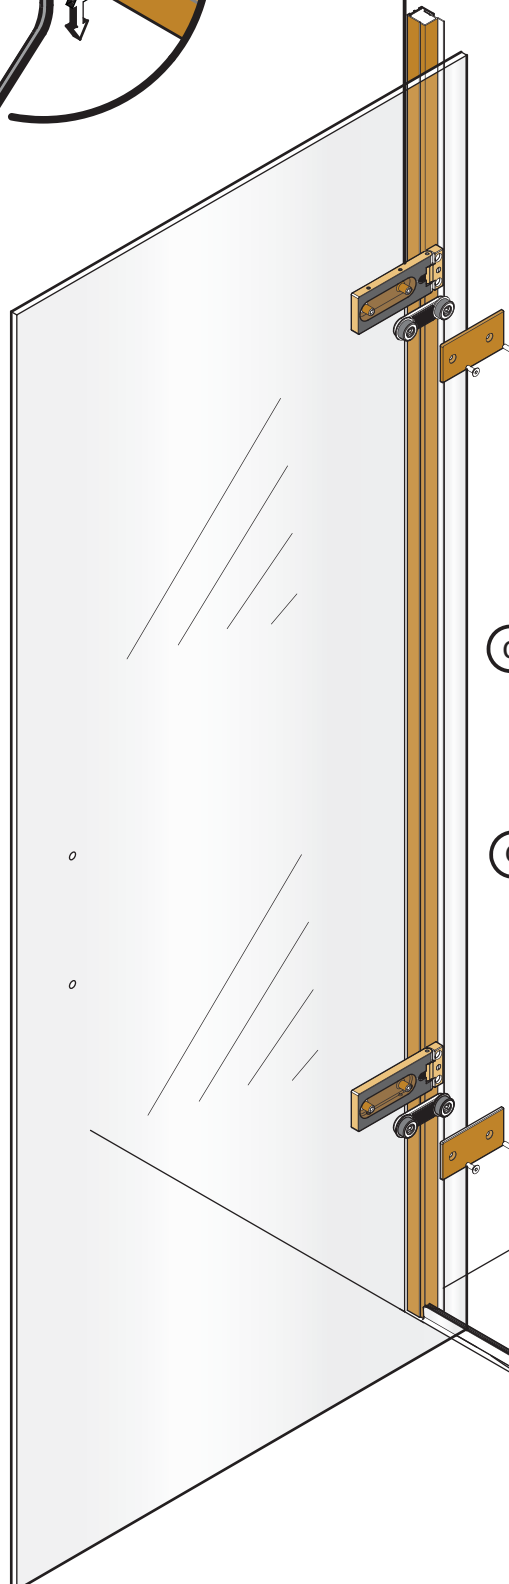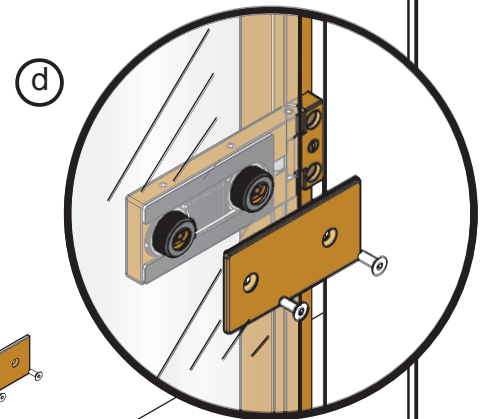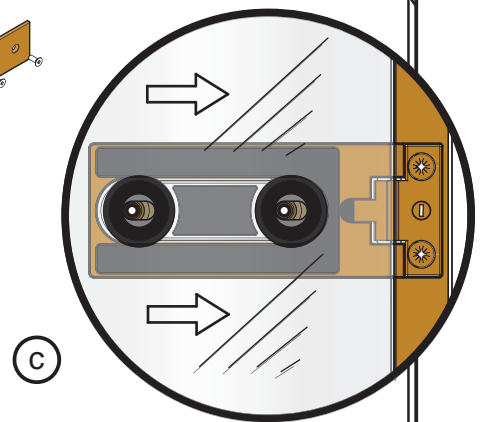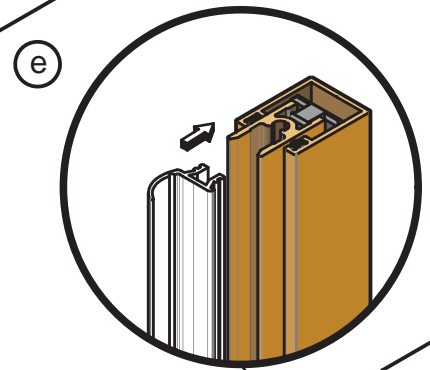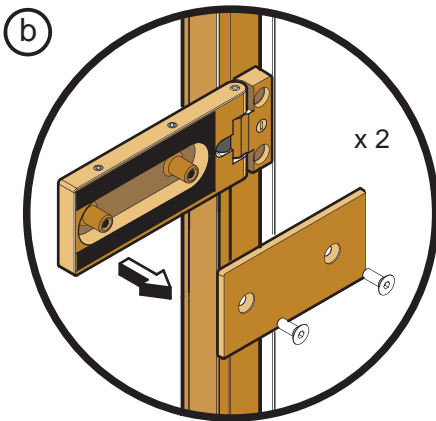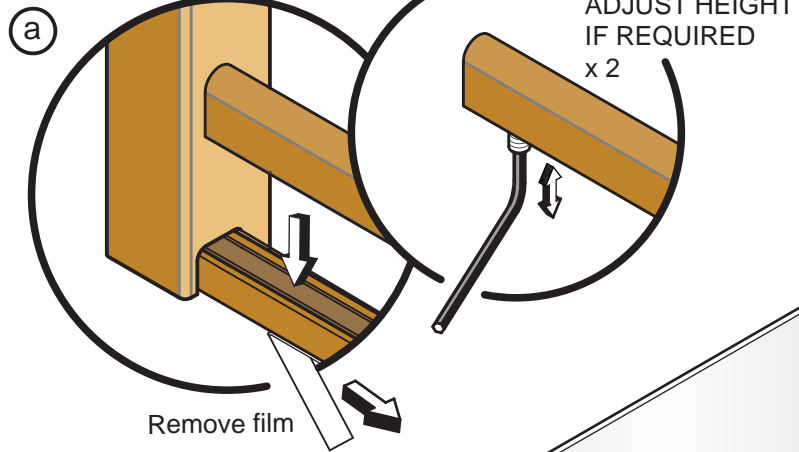


STAGE 6

HANDLE VARIANTS


ILLUSTRIOUS

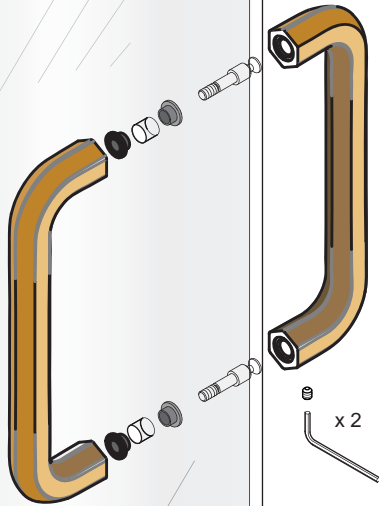


LINEAR

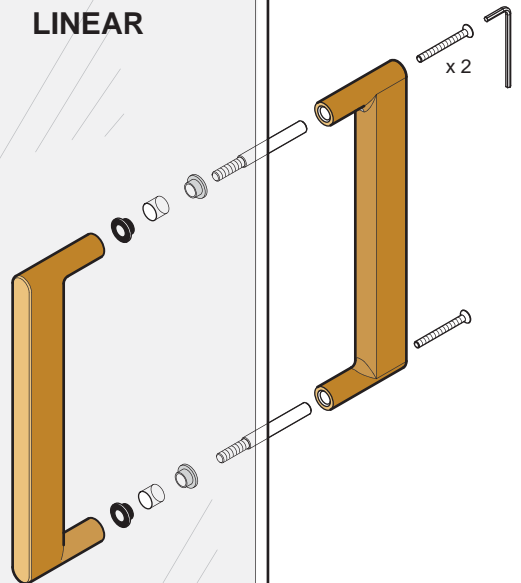

TRADITIONAL

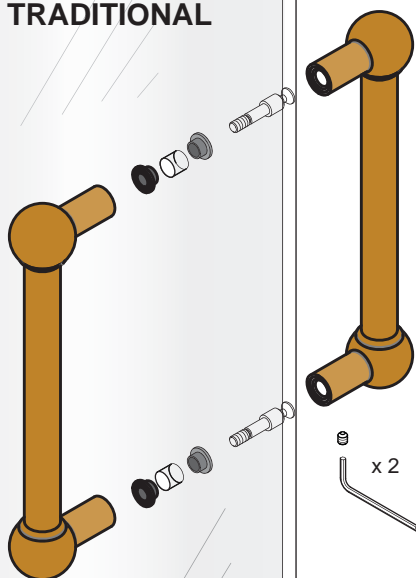


ENGINEER


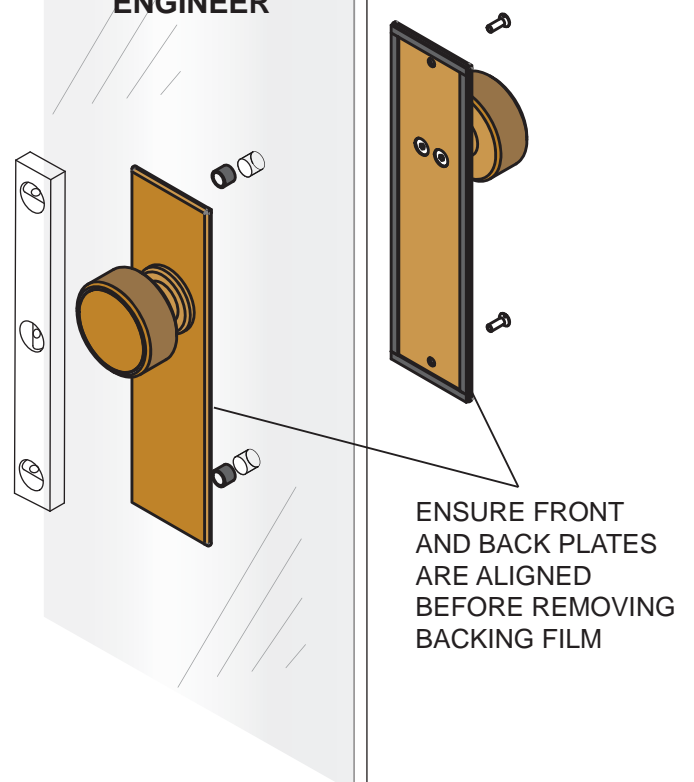


STAGE 7

b

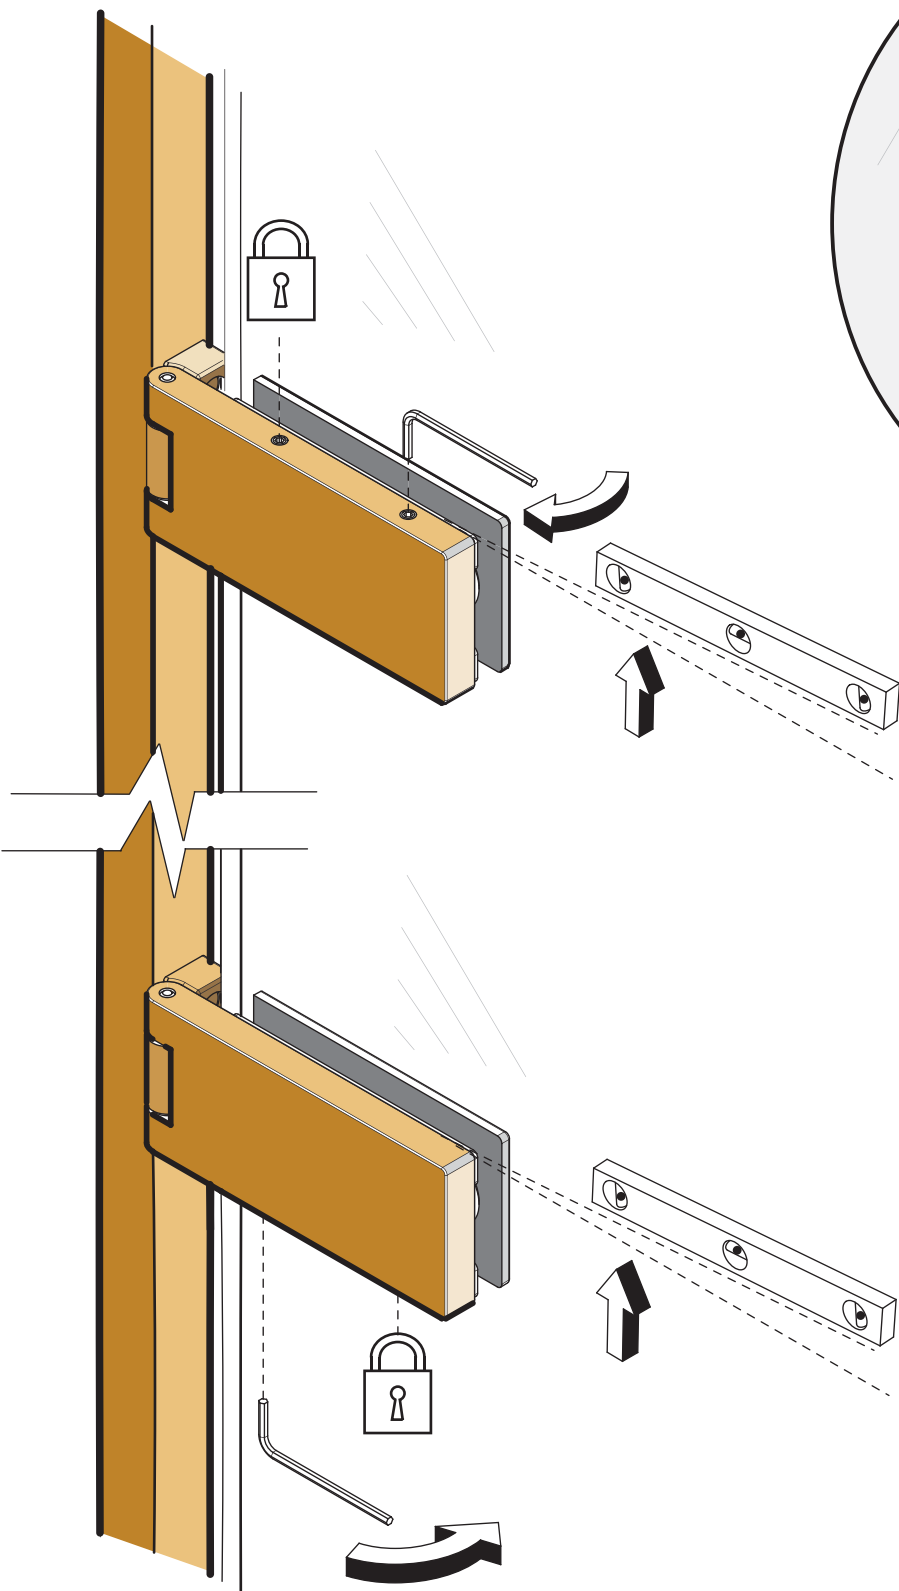


a

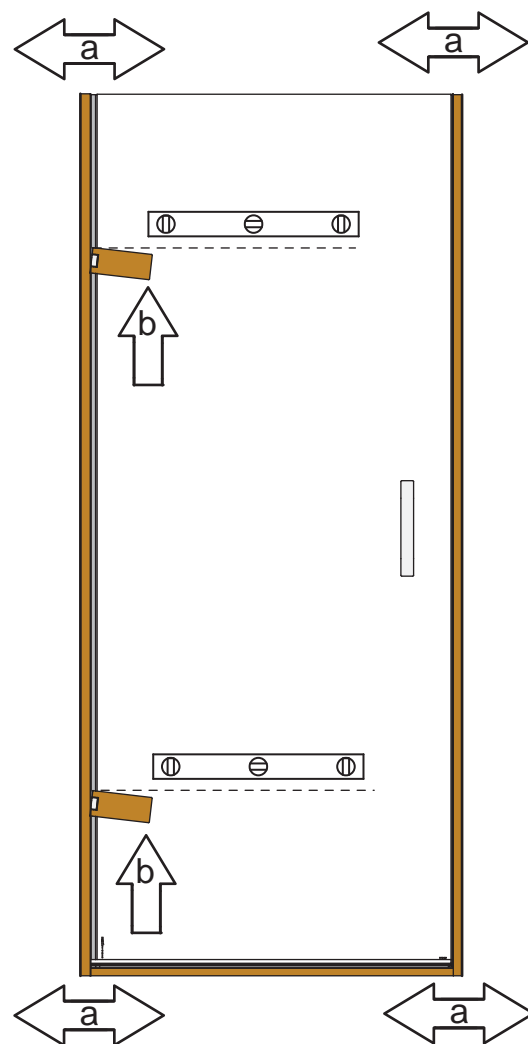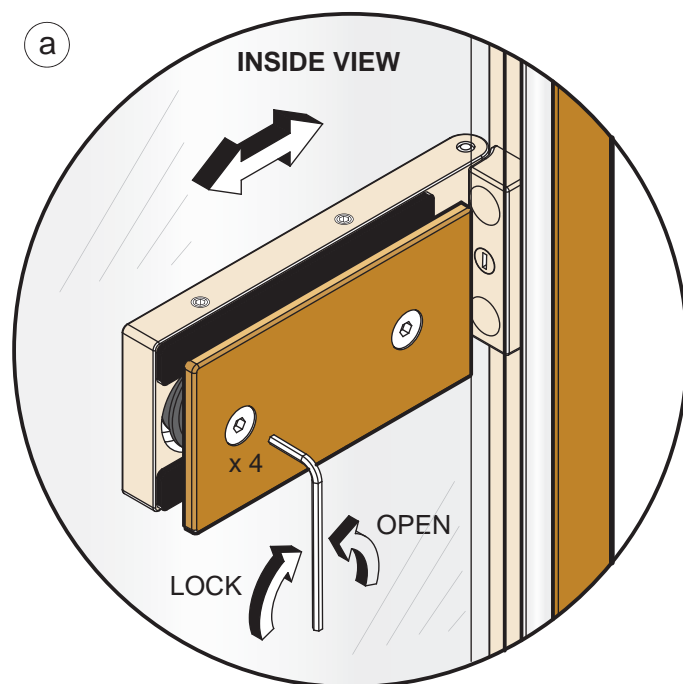


PARTS LIST

HINGE FRAME



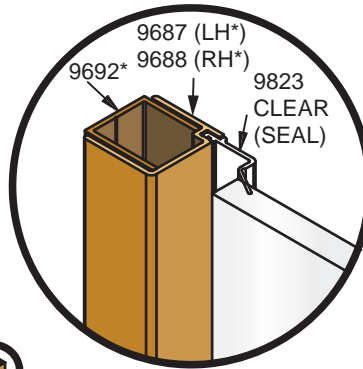


CLOSURE FRAME

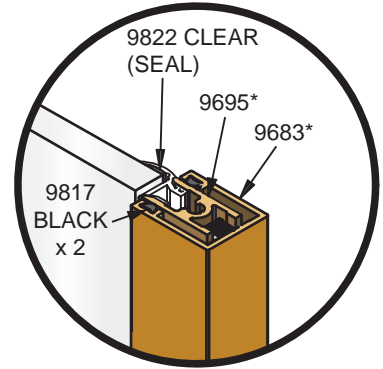

10620
ASSEMBLY



SPECIFY SIZE

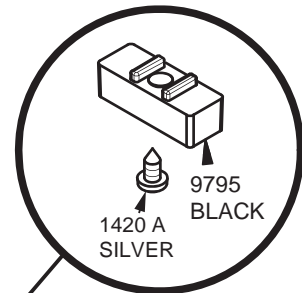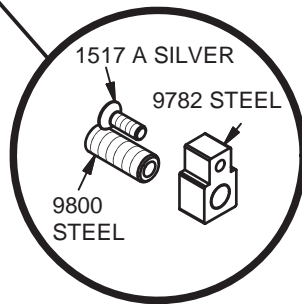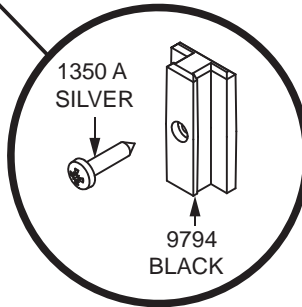

HANDLE VARIANTS



9809ASSY*

9808*

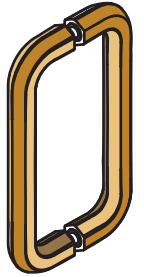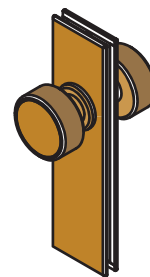



8632*

6185*

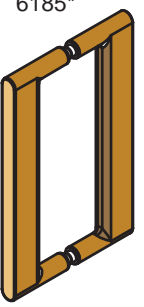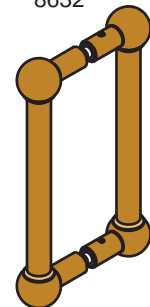


SPECIFY
SIZE

SPECIFY
SIZE

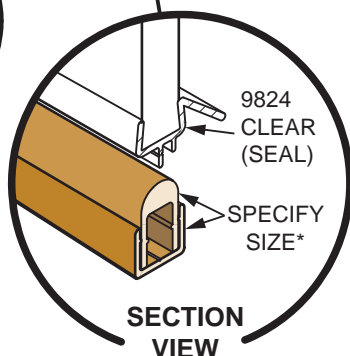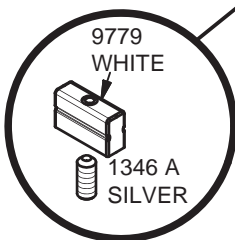




SECTION
VIEW

9926 AF
WALL HINGE
KIT OF PARTS

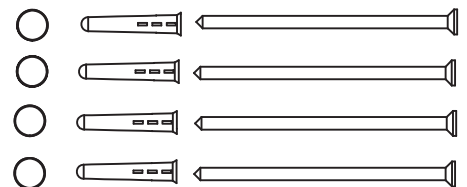

9864 AF
CLOSURE FRAME
KIT OF PARTS

9927 AF
HINGE FRAME
KIT OF PARTS



* SPECIFY COLOUR FINISH