

Swadling Brassware, Churchward Road, Yate, Bristol, BS37 5PL Telephone: 02392 255536 Email: tech@swadlingbrassware.co.uk




Traditional bottle trap **Installation Instructions** 



Before disposing of the carton and commencing installation, please check all parts against the parts list on back page. Please contact us immediately if any parts are missing or damaged.

## **INSTALLATION**

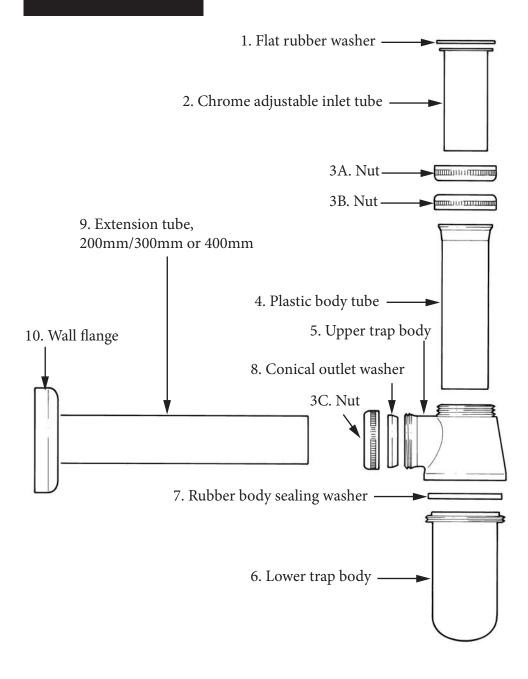

- A) Check all components are present and familiarize yourself with them.
- B) Fit the rubber body sealing washer (7) or check that it is in place.
- C) Fit the rubber washer (1) and assemble to the waste outlet with chrome nut (3A).
- D) The height of the waste outlet can be varied by approx. 110mm to line up with the position of the waste pipe. This is achieved by loosening the nut (3B) which then allows the adjustable inlet tube to move freely. After adjustment, re-tighten the nut (3B).
- E) Remove the nut (3C) and position this along the body of the extension tube (9) along with the conical outlet washer (8). Fit this assembly fully into the upper trap body (5) and tighten the nut (3C). The trap outlet will accept 35mm (1 ¼" trap) and 42mm (1 ½" trap) O.D. pipes. The standard UK specification plastic waste pipe will not fit into this outlet
- F) Fit the wall flange (10) to the extension tube (9).
- G) The extension tube can easily be connected to the main waste pipe by using a 1½" or 1½" multi-fit plastic connector (compression type). This is not supplied with this bottle trap.
- H) Finally, when all connections have been made, check that all joints are watertight.